


MOSIPO 10/440

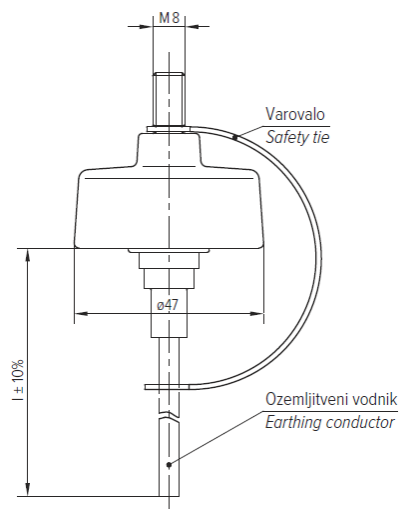

Technical specification

catalogue

[product catalogue \(pages from 7 to 20\)](#)

Packaging

Support

The position for installing NNO and MOSIPO surge arresters is decided by directives and technical regulations. They must be installed:

- on all branches and ends of low voltage overhead power lines,
- at a maximum mutual distance up to 1000 m,
- at a distance smaller than 500 m, where storms occur more often,
- in all passages from free conductors to cables and vice versa.